



Vers.01/01

Beiter Centralizer Factory Settings
 Beiter Centralizer - Abstände ab Werk

Length Länge	TUNER	A	B	C	D	E	F
26"	T2	6,5	7,0	8,0			
28"	T2	7,0	7,5	9,0			
30"	T2	7,5	8,5	9,5			
33"	T2	8,0	9,5	11,0			
35"	T2	9,0	10,0	11,5			
37"	T2	10,0	11,0	11,5			
41"	T2	11,0	12,0	13,5			
45"	T2	12,0	13,5	15,0			
28"	T3	4,5	5,5	6,0	6,5		
30"	T3	5,0	6,0	6,5	7,0		
33"	T3	5,5	6,5	7,5	8,0		
35"	T3	6,0	7,0	8,0	8,5		
37"	T3	7,0	7,5	8,0	9,0		
41"	T3	7,5	8,5	9,5	10,0		
45"	T3	8,5	9,5	10,5	11,0		
33"	T4	4,0	4,5	5,5	6,0	6,5	
35"	T4	4,5	5,0	5,5	6,0	7,5	
37"	T4	5,0	5,5	6,0	6,5	7,5	
41"	T4	5,5	6,5	7,0	7,5	8,0	
45"	T4	6,5	7,0	7,5	8,5	9,0	
49"	T4	7,5	8,0	8,5	9,0	10,0	
54"	T4	8,5	9,0	9,5	10,0	11,0	
49"	T5	4,5	5,5	6,5	7,5	8,5	9,5
54"	T5	5,0	6,0	7,0	8,0	9,5	11,5

=O==O===O====O=====O=====O=====O=====O
 A B C D E F

Factory settings between Tuners on a Beiter Centralizer
 Beiter Centralizer Abstände zwischen den Tunern ab Werk

Distance in inches (1 inch = 25,4mm) between the tuners
 Distanz in Zoll (1 Zoll = 25,4mm) zwischen den Tunern